


Kennedy
Since 1911

Kennedy Manufacturing Company
Phone 800-413-8665 • Fax 419-238-5644
www.kennedymfg.com
email: kmcinfo@kennedymfg.com

Installation of Security Lock Covers

1. Place security lock cover centered over lock.
2. Scribe the two piercings located each side of lock.
3. Drill scribed piercing with a 1/4" drill bit.
4. Place security lock cover over lock and assemble the supplied bolts, lock washers and nuts.

Part No. 527038

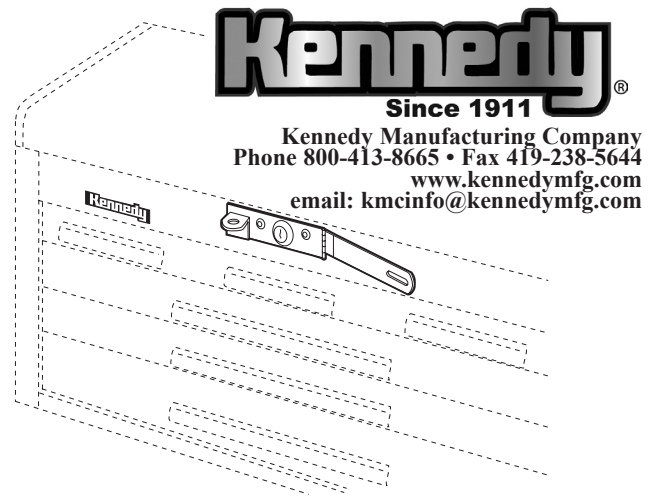


Kennedy
Since 1911

Kennedy Manufacturing Company
Phone 800-413-8665 • Fax 419-238-5644
www.kennedymfg.com
email: kmcinfo@kennedymfg.com

Installation of Security Lock Covers

1. Place security lock cover centered over lock.
2. Scribe the two piercings located each side of lock.
3. Drill scribed piercing with a 1/4" drill bit.
4. Place security lock cover over lock and assemble the supplied bolts, lock washers and nuts.

Part No. 527038

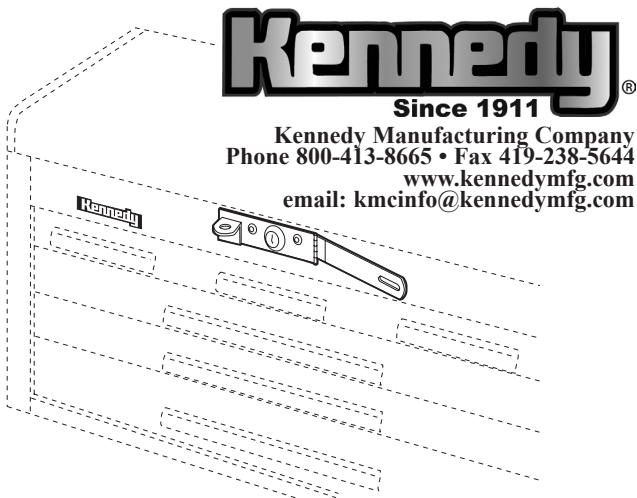


Kennedy
Since 1911

Kennedy Manufacturing Company
Phone 800-413-8665 • Fax 419-238-5644
www.kennedymfg.com
email: kmcinfo@kennedymfg.com

Installation of Security Lock Covers

1. Place security lock cover centered over lock.
2. Scribe the two piercings located each side of lock.
3. Drill scribed piercing with a 1/4" drill bit.
4. Place security lock cover over lock and assemble the supplied bolts, lock washers and nuts.

Part No. 527038

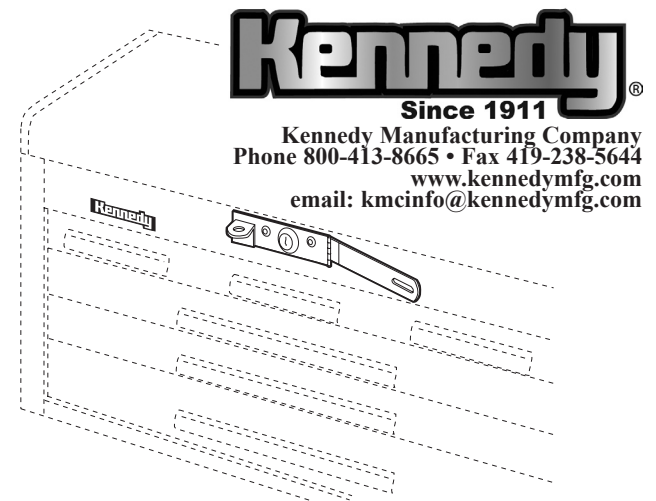

Kennedy
Since 1911

Kennedy Manufacturing Company
Phone 800-413-8665 • Fax 419-238-5644
www.kennedymfg.com
email: kmcinfo@kennedymfg.com

Installation of Security Lock Covers

1. Place security lock cover centered over lock.
2. Scribe the two piercings located each side of lock.
3. Drill scribed piercing with a 1/4" drill bit.
4. Place security lock cover over lock and assemble the supplied bolts, lock washers and nuts.

Part No. 527038